


# BF ASSEMBLY SHEET.

**CONTROLLERS ARE REMOVED FOR SHIPPING OR INSTALLATION.**


GASKET SET = Gasket + 2x M6 Bolts + Brass Insert.

**Push Brass Insert (A) Into pilot hole (B).**

Insert will only fit into one hole.

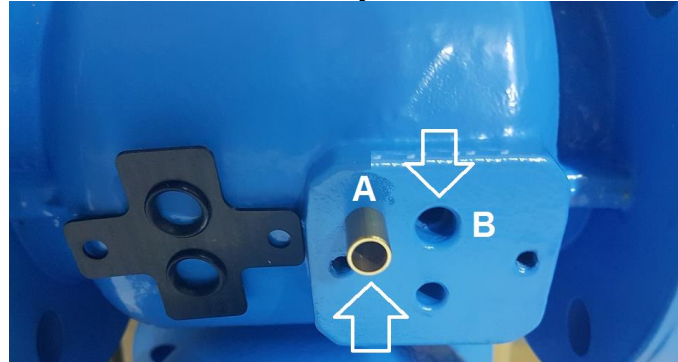

**Place Gasket Over Pilot Holes (P) and Screw Holes (S).**

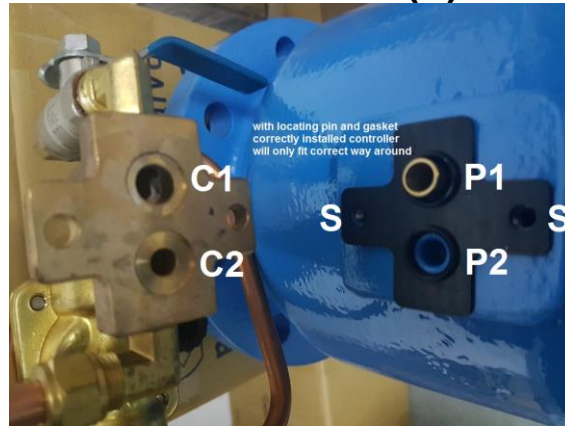

Place the Pipework Assembly onto the gasket by Hand, making sure P1 insert fits into C1, and P2 into C2. It should only fit one way around.

Insert & tighten the 2x M6x1mm 15-20mm long bolts provided.

Do not to over tighten as to strip the threads.

